

Keyboard Shortcuts

Ctrl + KEY (Latched using Scroll Lock: When on, Ctrl does not need to be pressed)

Key	Console Key	Key	Console Key
A	@	Delete	Clear
B	Bank	Shift+Delete	Delete
C	Copy	Pg Up	Next
D	Delay Time	Pg Down	Last
E	Edit	Space Bar	Main GO
F	Fade Time	Backspace	β
G	Group	TAB	Main Pause/Back
H	Highlight	>.	.
I	Full	?/	/
J	Previous Bank	Home	Snap
K	Next Bank	End	Release
L	Load	Home+End	Snap+Rel
M	Move	End+Home	Rel+Snap
N	Undo	-	-
O	Macro	+	+
P	Preview (Blind)	Enter	Enter
Q	Cue		CV Mode (Future)
R	Record		Programmer Mode (Future)
S	Save Show		Arrow Mode (Future)
T	Thru		
U	Update		
V	Playback View (Future)		
W			
X	Menu		
Y	Belt Resolution (Toggle Modes)		
Z	Snapshot (Future)		

Other Shortcuts

Key	Console Key	Key	Console Key
CTRL + F1	Select Screenview 1/9	F1	User Definable
CTRL + F2	Select Screenview 2/10	F2	User Definable
CTRL + F3	Select Screenview 3/11	F3	User Definable
CTRL + F4	Select Screenview 4/12	F4	User Definable
CTRL + F5	Select Screenview 5/13	F5	User Definable
CTRL + F6	Select Screenview 6/14	F6	User Definable
CTRL + F7	Select Screenview 7/15	F7	User Definable
CTRL + F8	Select Screenview 8/16	F8	User Definable
CTRL + F9	Toggle View Bank	F9	User Definable
		F10	User Definable
		F11	User Definable
		F12	User Definable

Playback Keys

Key	Console Key	Key	Console Key	Key	Console Key
ALT + 1	Select Fader 1 (LCD)	CTRL + 1	Fader 1 (Top Row)	Ctrl + Shift + 1	Fader 1 (Top Row)
ALT + 2	Select Fader 2 (LCD)	CTRL + 2	Fader 2 (Top Row)	Ctrl + Shift + 2	Fader 2 (Top Row)
ALT + 3	Select Fader 3 (LCD)	CTRL + 3	Fader 3 (Top Row)	Ctrl + Shift + 3	Fader 3 (Top Row)
ALT + 4	Select Fader 4 (LCD)	CTRL + 4	Fader 4 (Top Row)	Ctrl + Shift + 4	Fader 4 (Top Row)
ALT + 5	Select Fader 5 (LCD)	CTRL + 5	Fader 5 (Top Row)	Ctrl + Shift + 5	Fader 5 (Top Row)
ALT + 6	Select Fader 6 (LCD)	CTRL + 6	Fader 6 (Top Row)	Ctrl + Shift + 6	Fader 6 (Top Row)
ALT + 7	Select Fader 7 (LCD)	CTRL + 7	Fader 7 (Top Row)	Ctrl + Shift + 7	Fader 7 (Top Row)
ALT + 8	Select Fader 8 (LCD)	CTRL + 8	Fader 8 (Top Row)	Ctrl + Shift + 8	Fader 8 (Top Row)
ALT + 9	Select Fader 9 (LCD)	CTRL + 9	Fader 9 (Top Row)	Ctrl + Shift + 9	Fader 9 (Top Row)
ALT + 0	Select Fader 10 (LCD)	CTRL + 10	Fader 10 (Top Row)	Ctrl + Shift + 10	Fader 10 (Top Row)

Key	Console Key	Key	Console Key	Key	Console Key
Ctrl + Home + 1	Snap Forward Fader 1	Ctrl + Home + Shift + 1	Snap Back Fader 1	Ctrl + End + 1	Release Fader 1
Ctrl + Home + 2	Snap Forward Fader 2	Ctrl + Home + Shift + 2	Snap Back Fader 2	Ctrl + End + 2	Release Fader 2
Ctrl + Home + 3	Snap Forward Fader 3	Ctrl + Home + Shift + 3	Snap Back Fader 3	Ctrl + End + 3	Release Fader 3
Ctrl + Home + 4	Snap Forward Fader 4	Ctrl + Home + Shift + 4	Snap Back Fader 4	Ctrl + End + 4	Release Fader 4
Ctrl + Home + 5	Snap Forward Fader 5	Ctrl + Home + Shift + 5	Snap Back Fader 5	Ctrl + End + 5	Release Fader 5
Ctrl + Home + 6	Snap Forward Fader 6	Ctrl + Home + Shift + 6	Snap Back Fader 6	Ctrl + End + 6	Release Fader 6
Ctrl + Home + 7	Snap Forward Fader 7	Ctrl + Home + Shift + 7	Snap Back Fader 7	Ctrl + End + 7	Release Fader 7
Ctrl + Home + 8	Snap Forward Fader 8	Ctrl + Home + Shift + 8	Snap Back Fader 8	Ctrl + End + 8	Release Fader 8
Ctrl + Home + 9	Snap Forward Fader 9	Ctrl + Home + Shift + 9	Snap Back Fader 9	Ctrl + End + 9	Release Fader 9
Ctrl + Home + 10	Snap Forward Fader 10	Ctrl + Home + Shift + 10	Snap Back Fader 10	Ctrl + End + 10	Release Fader 10